



Tablet Wall Mount Assembly

Revised 17th June 2024

Thank you for purchasing a tablet wall mount from The 3D Room.

We've put together a quick guide on how to assemble the mount and fit your tablet. Having assembled quite a few, we've learned a few 'knacks' that we hope you will find useful.


The mount is supplied partially assembled. You will need to separate the front frame from the rear frame. Before doing this find the location of the power button opening. Separate the front frame from the rear frame by gently levering the side opposite the power button opening. The wall spacer is attached to the inside of the rear frame and this will need to be removed prior to installation.

Please note, this is a generic guide featuring a Fire HD10 2021 tablet. All of our mounts follow the same basic design principles so, although your tablet may differ, methodology for mounting will be similar.

IMPORTANT - READ BEFORE MOUNTING!


The small clips designed to secure the tablet into the rear frame can cause marks on the edge of your tablet.

If this is of concern, we would suggest covering the clips with electrical tape (or similar). We cannot be held responsible for any damage caused by using our mounts.

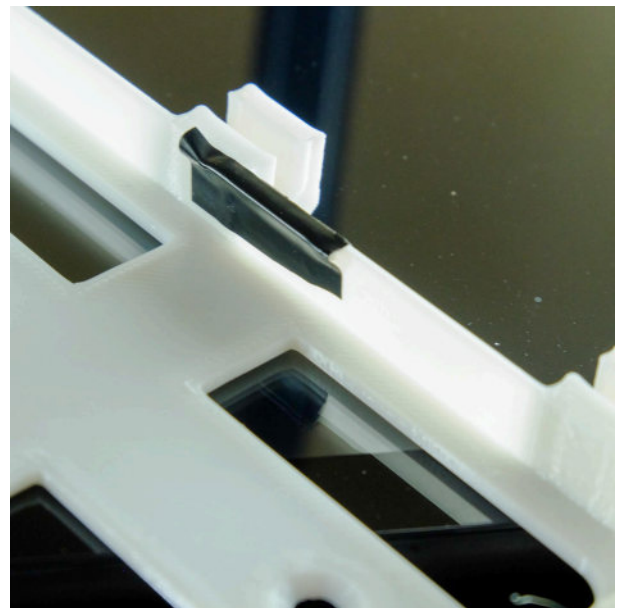


Before mounting the spacer (if used) and rear frame, determine your cable route. This will vary depending on whether the space is being used. Route your cable under one of the channels in the spacer before tightening the mounting screws!

Tighten the screws, then route the cable around the provided channels. The route is up to you and will vary depending on where your cable is entering the mount.

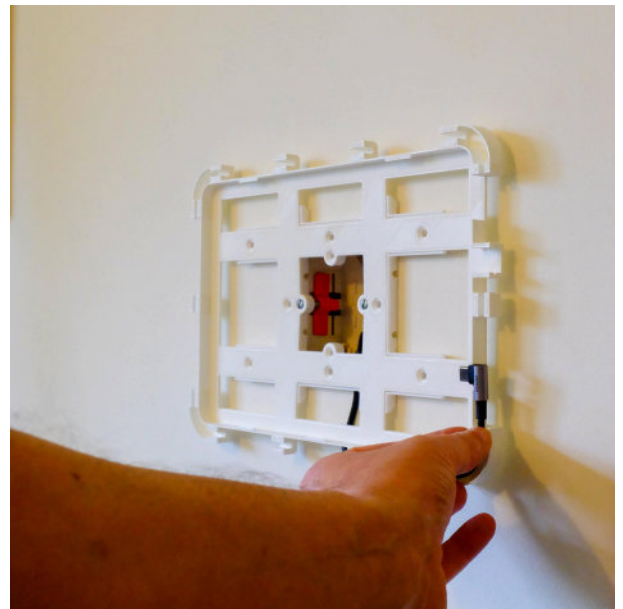

Slip the power button extension into the small channels provided in the frame. The position of this will vary depending on which tablet mount you have purchased.

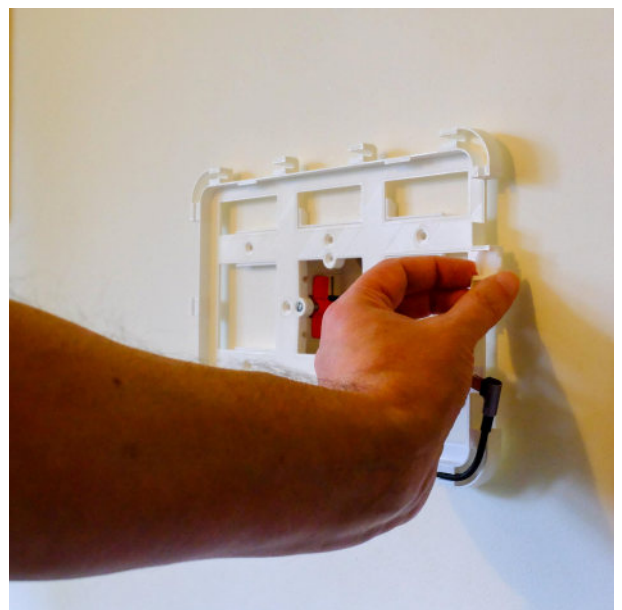


Note the orientation of the power button extension. Larger side points inwards, as pictured.




Offer the tablet up to the frame.
Start off by inserting the bottom edge of the tablet under the clips on the lower edge of the frame.



With the lower edge of the tablet under the clips, apply even pressure to the top edge of the tablet to push it under the top clips. The frame will flex slightly during this process.

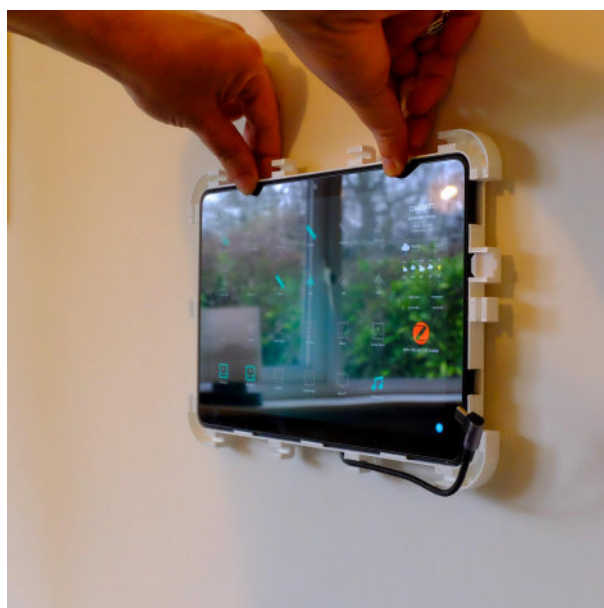

Plug in the power connector.

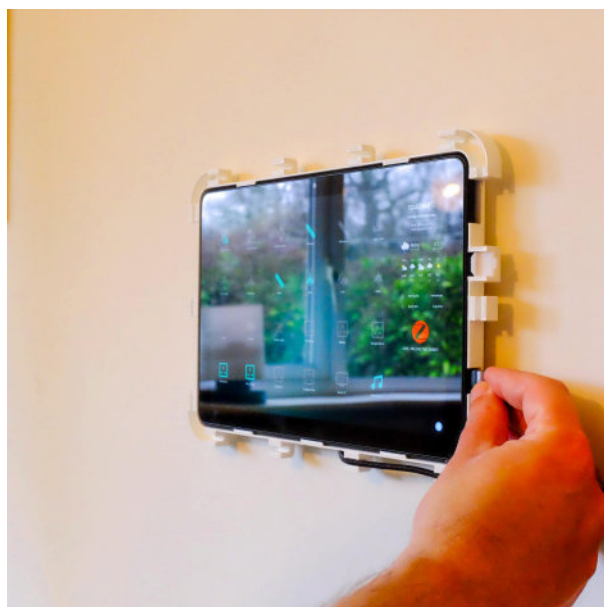

When fitting the front frame, you should offer up the side containing the opening for the power switch first, making sure the small 'button' is aligned with the opening.

You can then work around the rest of the frame, snapping it into place.



The outer frame is quite flexible and you can gently ease the small clips over the chamfered areas on the rear frame.



Job done!




If you need to remove the tablet from the mount, we have found the easiest method is to use a bank card or thin blade.

Support the front of the tablet - the frame will let go of it suddenly and you don't want it to end up on the floor!

Slide the card between the top of the tablet and frame.

Angle the card and the tablet will pop out.

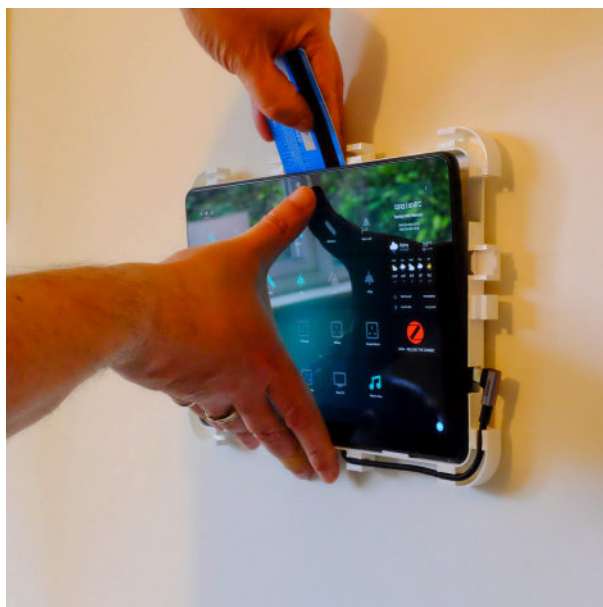

We hope you will be pleased with your purchase but, if there are any issues, please get in touch with us. Likewise, if you have any ideas or suggestions, please let us know!